



# REDZONE STICK VP

## VAPOUR PERMEABLE AIR BARRIER SELF-ADHESIVE MEMBRANE


### INSTALLATION INSTRUCTIONS

1



Peel off the top portion of the silicone release film and adhere the membrane to the substrate, making sure the membrane is well aligned.

2

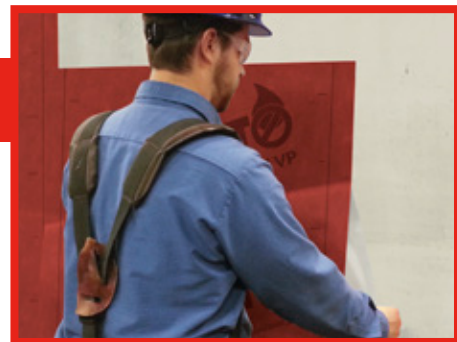

Gradually peel off the remaining silicone release film, making sure the membrane adheres completely to avoid air pockets and wrinkles.

3



Use a roller to apply pressure over the entire surface of the membrane to ensure uniform adhesion to substrate.

## RESISTO

Please contact your dealer directly or go to [www.resisto.ca](http://www.resisto.ca) for more information about this product.